

IQ Battery 5P with FlexPhase

The IQ Battery 5P with FlexPhase is an all-in-one AC-coupled system that is powerful, reliable, simple, and safe. The battery can be flexibly used in both single-phase and three-phase applications. It has a total usable energy capacity of 5.0 kWh and includes six embedded IQ8T-BAT Microinverters providing up to 3.84 kVA continuous power in single-phase configuration and 1.28 kVA continuous power per phase in three-phase configuration.









Key specifications	Single-phase	Three-phase	
Rated (continuous) output power ¹	Up to 3.84 kVA	Up to 3.84 kVA (1.28 kVA per phase)	
Rated output current	Up to 16.7 A	Up to 16.7 A (5.56 A per phase)	
Nominal AC voltage	230 V _{L-N}	$230\ V_{L-N}, 400\ V_{L-L}$	
Nominal frequency	50 Hz		
Usable capacity	5.0 kWh		
Ambient operating temperature range	−20°C to 55°C		
Chemistry	Lithium iron phosphate (LFP)		
Mounting	Wall-mount/pedestal-mount		

Dimensions in mm

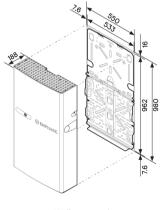

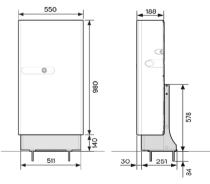

Wall-mounted Floor-mounted with pedestal

- Delivers continuous power of up to 3.84 kVA in single-phase and 1.28 kVA per phase in three-phase configuration
- Includes six IQ8T-BAT Microinverters for reliable performance

(V) Reliable

- · 15-year limited warranty
- · Passive cooling no moving parts
- · Uses wired control communication
- Remote software and firmware updates

Simple

- AC-coupled system for fast installation and commissioning
- Supports Self-Consumption, Full Backup, Time-of-Use (TOU) modes, and is VPP Ready.
- Monitor and control via the Enphase App
- · Field replaceable components

✓ Saf

- Evaluated to UL 9540A, the highest industry standard for battery safety
- Lithium Iron Phosphate (LFP) chemistry for safety and longevity

[♦] Powerful

¹ There are multiple models. Refer to the following page for model-specific ratings.

Product details	IQ Battery 5P with FlexPhase
Order code	IQBATTERY-5P-3P-INT
Description	The IQ Battery 5P with FlexPhase is an AC-coupled battery (convertible between single-phase and three-phase) ² with integrated IQ8T-BAT Microinverters and a battery management system (BMS) with battery controller

Output	Single-phase				
Model name ³	IQBATTERY-5P-3P-INT-X.XX-1P				
X.XX ³	1.65	2.50	3.00	3.68	3.84
Rated (continuous) output apparent power	1.65 kVA	2.50 kVA	3.00 kVA	3.68 kVA	3.84 kVA
Rated output current	7.17 A	10.87 A	13.04 A	16 A	16.7 A
Peak output current (10 seconds, 3 seconds) ⁴	11.5 A, 14.3 A	17.4 A, 21.7 A	20.9 A, 26.1 A	25.6 A, 32 A	26.7 A, 33.4 A
Nominal AC voltage			230 V _{L-N}		
Nominal AC voltage range			211-264 V _{L-N}		

Output	Three-phase				
Model name ⁵	IQBATTERY-5P-3P-INT-X.XX-3P				
X.XX ⁵	1.84	2.50	3.00	3.68	3.84
Rated (continuous) output apparent power	1.84 kVA	2.50 kVA	3.00 kVA	3.68 kVA	3.84 kVA
Per phase rated (continuous) output apparent power	0.61 kVA	0.83 kVA	1kVA	1.23 kVA	1.28 kVA
Per phase rated output current	2.67 A	3.62 A	4.35 A	5.33 A	5.56 A
Per phase peak output current (10 seconds, 3 seconds) ⁶	4.27 A, 5.33 A	5.8 A, 7.23 A	6.97 A, 8.7 A	8.53 A, 10.67 A	8.9 A, 11.13 A
Nominal AC voltage			400 V _{L-L}		
Nominal AC voltage range	366 V _{L-L} −457 V _{L-L}				

Output	
Nominal frequency	50 Hz
Nominal frequency range	47 Hz-53 Hz
Power factor, grid-tied	0.8 leading 0.8 lagging
Power factor, backup	1.0 leading 1.0 lagging
AC round-trip efficiency 7	90%
Operating modes	Supports Self-Consumption, Full Backup $^{\rm 8}$, Time-of-Use (TOU) modes, and is VPP Ready $^{\rm 9}$

Battery module	
Usable capacity ¹⁰	5.0 kWh
DC round-trip efficiency ¹¹	96%

² Factory default configuration is set to single-phase. To switch to a three-phase configuration, refer to the instructions provided in the quick installation guide (QIG).
³ In single-phase the model names would be IQBATTERY-5P-3P-INT-1.65-IP, IQBATTERY-5P-3P-INT-2.50-IP, IQBATTERY-5P-3P-INT-3.00-IP, IQBATTERY-5P-3P-INT-3.68-IP, and IQBATTERY-5P-3P-INT-3.84-1P.

During backup operation.

The model names in three-phase are IQBATTERY-5P-3P-INT-1.84-3P, IQBATTERY-5P-3P-INT-2.50-3P, IQBATTERY-5P-3P-INT-3.00-3P, IQBATTERY-5P-3P-INT-3.68-3P, and IQBATTERY-5P-3P-INT-3.84-3P.

During backup operation.

ACt to the battery to AC at 50% power rating at 25°C (at the beginning of life). Actual round-trip efficiencies can vary based on ambient temperatures, load patterns, and other external factors.

Supports internet connectivity and remote control by third-party VPP operators via API.

The battery's usable capacity supports loads, and turns PV on (when off-grid), in normal daily operation. The usable capacity includes a safety critical limit of 2% that safeguards the customer's asset in case of a long-duration grid outage. An additional 3% capacity is maintained for battery electronic sustenance during the night. Refer to <a href="https://link.enphase.com/iq-battery-usable-capacity-transfer and internet control by the property of the patternet control by the patternet control by third-party VPP operators via API.

The battery's usable capacity includes a safety critical limit of 2% that safeguards the customer's asset in case of a long-duration grid outage. An additional 3% capacity is maintained for battery electronic sustenance during the night. Refer to https://link.enphase.com/iq-battery-usable-capacity-transfer and internet control by third-party VPP operators via API. tech-brief for more information.

Battery module		
Nominal DC voltage	76.8 V	
Ambient operating temperature (charging) ¹²	-20°C to 50°C	
Ambient operating temperature (discharging) ¹³	-20°C to 55°C	
Chemistry	Lithium iron phosphate (LFP)	
Mechanical data		
Dimensions (H × W × D)	980 mm × 550 mm × 188 mm	
Lifting weight	69.5 kg	
Total installed weight	83 kg	
IP rating - IQ Battery	IP55	
IP rating - IQ8T-BAT Microinverter	IP67	
Cooling	Natural convection	
Altitude	<2000 m	
Mounting	Wall-mount (included) or pedestal-mount (sold separately)	
Installation location	Indoor/Outdoor	
Communication interfaces		
Communication	Wired control communication (Enphase recommended control cables)	
Monitoring	Enphase Installer Platform, Enphase App, and API integration	
Standards		
Grid compliance	AS/NZS 4777.2:2020 + A2	
EMC	EN 50065-2-2, IEC 61000-3-2, IEC 61000-3-3, IEC 61000-4-2, IEC 61000-4-3 IEC 61000-4-4, IEC 61000-4-5, IEC 61000-4-11, IEC 61000-6-2	
Safety	AS IEC 62040.1, EN IEC 62109-1, EN IEC 62109-2, AS IEC 62619, UN 38.3	
Limited warranty		
Limited warranty	>60% capacity, up to 15 years or 6000 cycles ¹⁴	
What's in the box (Order code: IQBATTERY-5P	-3P-INT)	
IQ Battery 5P with FlexPhase	Base battery unit of IQ Battery 5P with FlexPhase with six integrated IQ8T-BAT Microinverters	
ID cover and conduit cover	IQ Battery ID cover along with four conduit covers, two each for the left and right sides of the unit	
Bottom mounting bracket and top protective shield	Bottom mounting bracket for mounting the battery unit on the wall and one top protective shield	
M5 locking screws	Two M5 locking screws for securing the battery unit on the bottom mounting bracket	
	Two M4 grounding screws for securing the top protective shield on the bottom mounting bracket	
M4 grounding screws	mounting bracket	
M4 grounding screws M5 ID cover grounding screws	Two M5 ID cover grounding screws for fixing ID cover to battery base unit	
	-	

At the beginning of life.
 Reduction in charging power will occur at temperatures below 15°C and above 45°C.
 Reduction in discharging power will occur at temperatures below 5°C and above 50°C.
 Whichever occurs first. Restrictions apply. The full text of the warranty is available at https://enphase.com/installers/resources/warranty.

What's in the box (Order code: IQBATTERY-	5P-3P-INT)		
Control (CTRL) connector	One pre-installed and one spare CTRL connector without resistor for CTRL wir		
Control (CTRL) connector with resistor	One pre-installed and one spare CTRL connector with resistor for CTRL wiring		
Quick install guide (QIG)	IQ Battery 5P with FlexPhase installation instructions		
Control (CTRL) drain connector	One pre-installed and one spare CTRL drain connector for CTRL wiring		
Drill template	One drill template for marking drilling locations on the mounting surface		
Accessories and replacement parts			
IQBATTERY-5P-3P-INT-RMA	IQ Battery 5P with FlexPhase unit for field replacement		
B305-CX-0550-O	IQ Battery 5P cover only (includes one ID cover)		
B305-CP-0140-O	IQ Battery 5P conduit plates only (includes four conduit covers, two each for the left and right sides of the unit)		
B05-WB-0543-O	IQ Battery 5P wall bracket only (includes one wall bracket and one top shield)		
B05-PM-0550-O	IQ Battery 5P Pedestal Mount		
IQBATTERY-HNDL-5	One set of IQ Battery 5P Lifting Handles (includes one left-side and one right-side lifting handle)		
B305-ACFB-200-O	IQ Battery 5P AC filter board only (includes AC filter board PCBAs)		
B305-BMSIA-0490-O	IQ Battery 5P BMS board only (includes one BMS board PCBA of INT)		
B305-IICS-0524-O	IQ Battery 5P in-house control switch only. Includes one in-house control switch preinstalled on the IQ Battery 5P wiring cover (INT)		
B305-CANBI-042-O	IQ Battery 5P control communications board only (includes one control communications PCBA)		
IQ8T-BAT-RMA	Enphase IQ8T-BAT Microinverter for IQ Battery 5P with FlexPhase for field replacement		
B305-TBL-077-O	IQ Battery 5P Line terminal block		
B305-TBN-077-O	IQ Battery 5P Neutral terminal block		
B305-TBG-077-O	IQ Battery 5P Ground terminal block		
B305-FUSE-0005-O	IQ Battery 5P fuse		
B305-TBJ-085-O	IQ Battery 5P jumper		
Compatibility			
IQ Gateway Metered	ENV-S-WM-230		
IQ Relay (single-phase and three-phase)	Q-RELAY-1P-INT and Q-RELAY-3P-INT		
Communications Kit 2 INT (for grid-tied operation)	COMMS-KIT-INT-02		
IQ System Controller 3 INT (for backup operation)	SC100G-M230ROW		

Manufacturer: Enphase Energy Inc., 47281 Bayside Pkwy., Fremont, CA, 94538, United States of America, PH: +1 (707) 763-4784 Importer: Enphase Energy Aust. Pty/Ltd., 88 Market St., South Melbourne VIC 3205, PH: +61 3 86691679 Assembled in China.

(for backup operation)

Solar inverters

IQ Series Microinverters, third-party PV string inverters $^{\!15}$

¹⁵ Refer to the Systems planning guide for more information on using third-party PV string inverters with IQ System Controller 3 INT in grid-tied systems.

Components of the Enphase Energy System



IQ System Controller 3 INT

The system controller is an integrated enclosure containing all components necessary for backup operation in case of grid outage.



IQ Microinverters

IQ Series Microinverters pack more power into less space than other rooftop solar systems and make rooftop solar more productive, reliable, smart, and safe.



IQ Gateway and Communications Kit 2 INT

The IQ Gateway with current transformers provides complete control and insight into the Enphase Energy System.

The Communications Kit 2 INT enables wired communication between the battery and the gateway for grid-tied operation.



IQ Battery 5P with FlexPhase accessories

The lifting handles are reusable and ease the installation process.

The pedestal enables floor mounting of the battery.

Revision history

Revision	Date	Description
DSH-00745-3.0	July 2025	Removed rated output current and peak output current values.
DSH-00745-2.0	June 2025	Added units to rated (continuous) output apparent power.
DSH-00745-1.0	May 2025	Preliminary release.